

Trust




MUTA | WIRELESS



SUITABLE FOR:
PC LAPTOP SWITCH™

www.trust.com/23579/faq


1. SWITCH™

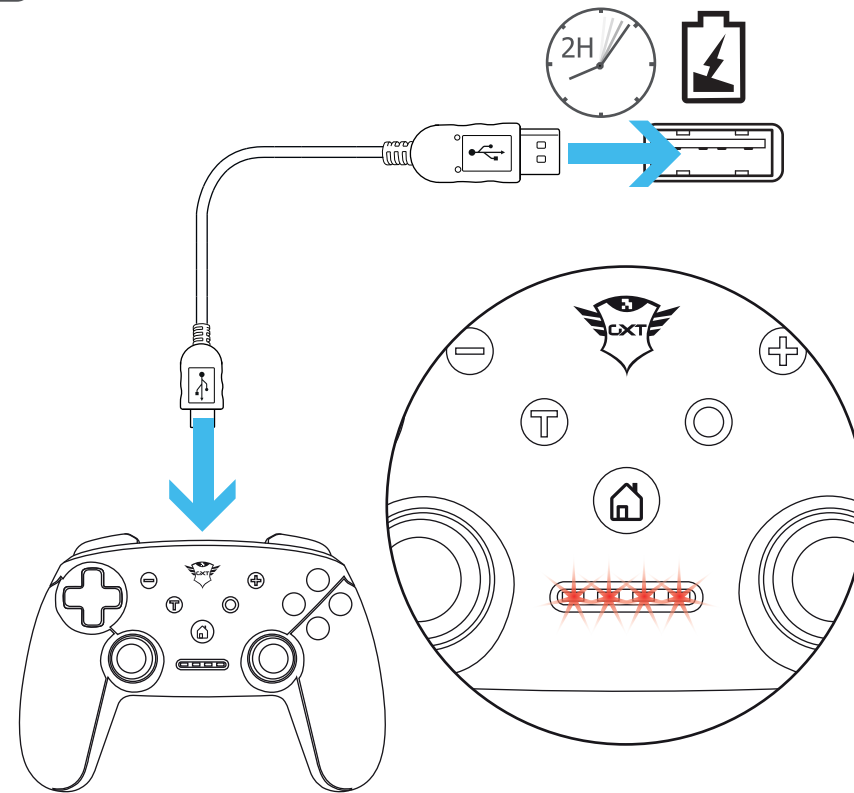


2. SWITCH™

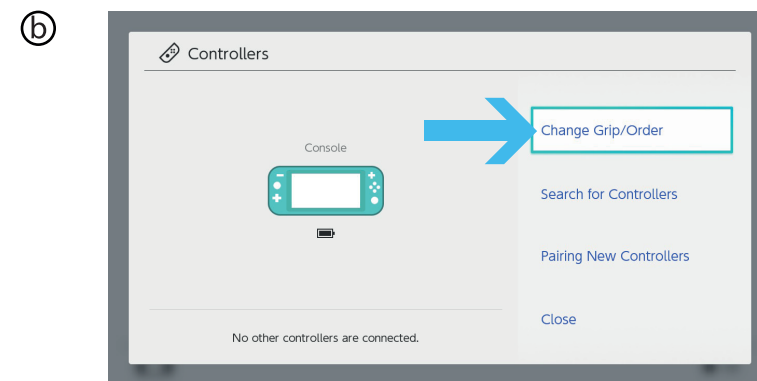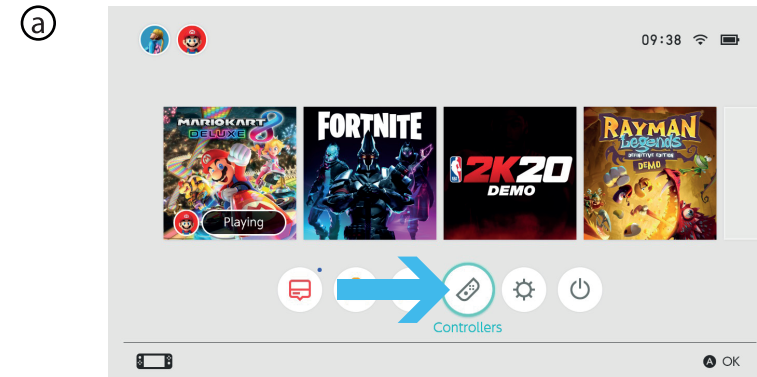



3. SWITCH™

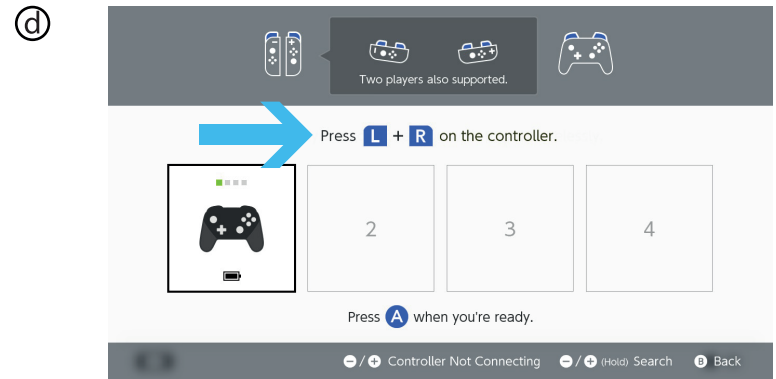

4. PC LAPTOP

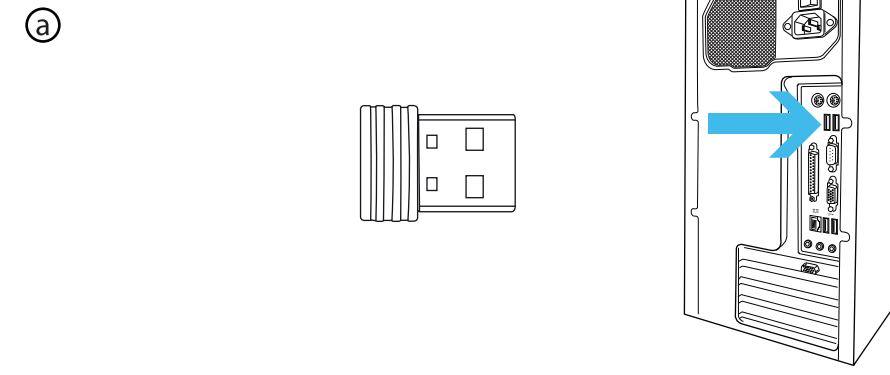

5. PC LAPTOP SWITCH™

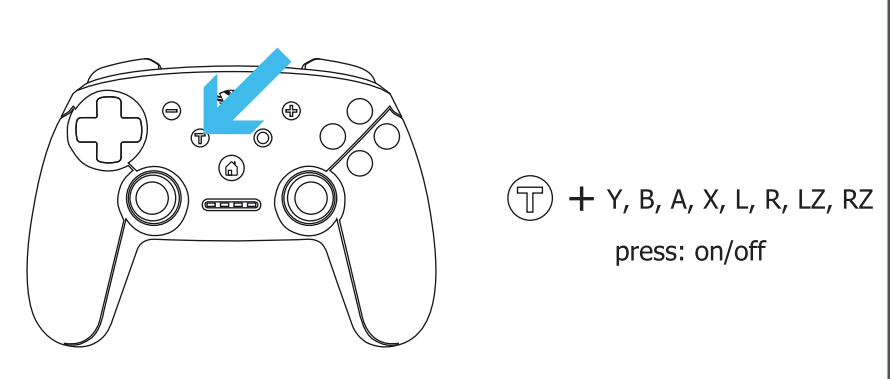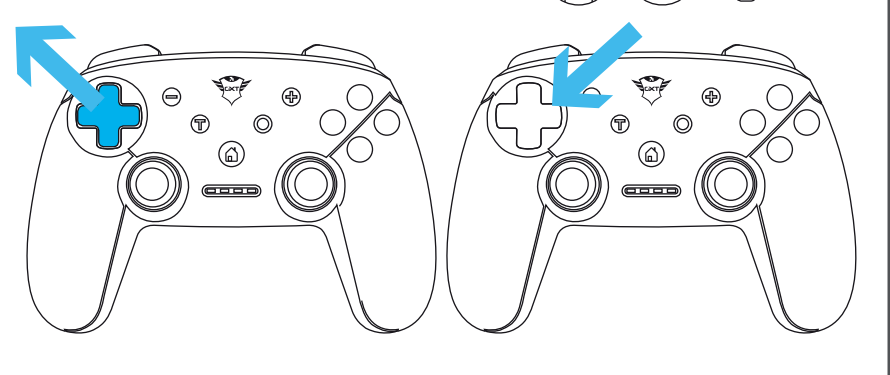

T + Y, B, A, X, L, R, LZ, RZ
press: on/off

6.

| Controller key | Switch | PC XInput |
|----------------|------------|-----------|
| Y | Y | X |
| B | B | A |
| A | A | B |
| X | X | Y |
| + | + | Start |
| - | - | Back |
| L-Stick | L-Stick | L-Stick |
| R-Stick | R-Stick | R-Stick |
| L | L | LB |
| R | R | RB |
| LZ | LZ | LT |
| RZ | RZ | RT |
| L3 | L3 | L3 |
| R3 | R3 | R3 |
| T | Turbo | Turbo |
| O | Screenshot | N/A |
| Up | Up | Up |
| Down | Down | Down |
| Left | Left | Left |
| Right | Right | Right |
| H | Home | Guide |