

SENCOR®

SFD 3109BK





FOOD DEHYDRATOR
Translation of the original manual



SENCOR®

SFD 3109BK



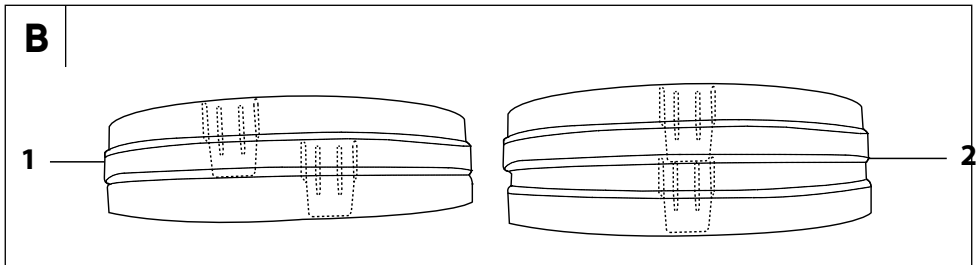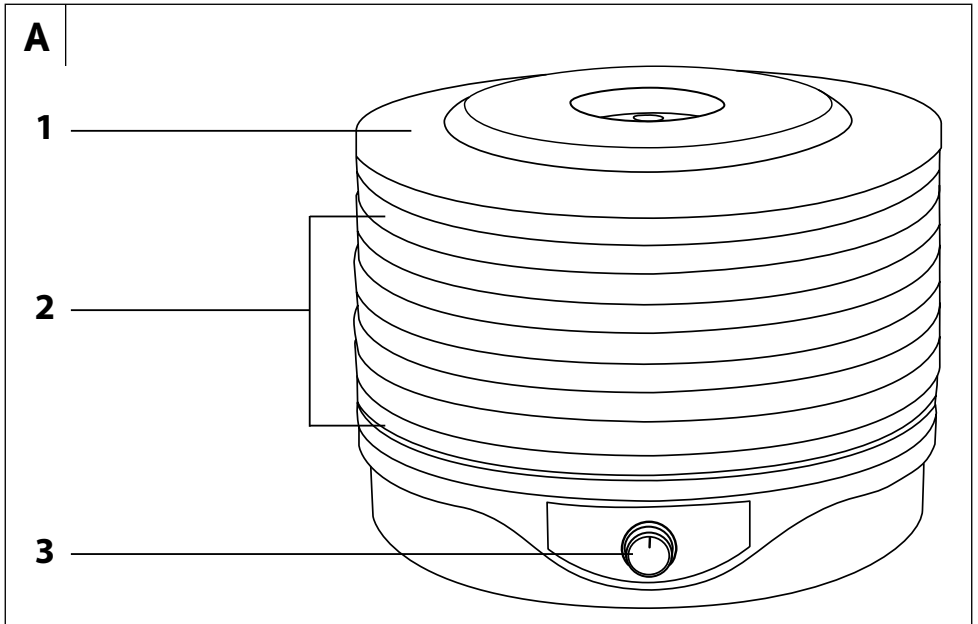

EN Food Dehydrator

Important safety instructions

READ CAREFULLY AND STORE FOR FUTURE USE.

- This appliance may be used by children 8 years of age and older and by persons with physical or mental impairments or by inexperienced persons, if they are properly supervised or have been informed about how to use the product in a safe manner and understand the potential dangers.
- Children must not play with the appliance. Cleaning and maintenance performed by the user must not be performed by children unless they are older than 8 years of age and under supervision.
- In the event that the power cord is damaged, have it repaired at a professional service centre to prevent causing a dangerous situation. It is forbidden to use the appliance if it has a damaged power cord.
- Children younger than 8 years of age must be kept away from the appliance and its power cord.
- Before connecting this appliance to a power socket, make sure the voltage stated on the label of the appliance corresponds to the voltage in your power socket.
- Water and electrical current are a dangerous combination. Never use the appliance in the near vicinity of a bath, shower or swimming pool.

- Never use accessories, which have not been supplied with this appliance or which are not designed for this appliance.
- Do not place the appliance on window sills.
- Make sure that the power cord and plug cannot come into contact with water or dampness.
- Always place the appliance on an even and stable surface.
- Do not spray the appliance with water or any other liquid. Do not submerge the base of the appliance into which the power cord leads in water or any other liquid. Do not pour water or any other liquids into the appliance.
- This appliance is designed for household use. Do not use it in an industrial environment or outdoors!
- Do not use sprays in the vicinity of the appliance.
- If the appliance is used in the vicinity of children, be especially careful and select an installation location that is out of their reach.
- If you will not be using the appliance, disconnect it from the electrical grid. Before cleaning or moving it, proceed in the same manner. Before disassembling its parts, allow it to cool down.
- Do not connect the power cord into a power socket when the individual trays are turned upside down (in the storage position) and do not turn them over to the storage position unless they have cooled down completely.
- Do not place the appliance on an electric or gas stove or in its vicinity, do not place it in the vicinity of an open fire or other equipment or appliances that are a source of heat.
- Do not use the appliance if it has a damaged power cord , or power plug.

- In no case should you attempt to repair the product yourself, do not make any amendments to it – danger of electrical shock! Entrust all repairs and adjustments to a specialised company/service. Failure to do so will expose you to the risk of voiding the warranty policy.
- Do not place the power cord of the appliance near hot surfaces or over sharp objects. Do not place heavy objects on the power cord, position the cord so that it is not stepped on or tripped over. Make sure the power cord does not hang over the edge of a table or that it is not touching a hot surface.
- Do not disconnect the appliance from the power socket by pulling the power cord – it may damage the power cord / power socket. Disconnect the power cord from the power socket by gently pulling the plug of the power cord.
- Do not use the appliance for any other purposes than those for which it was designed.
- Do not use this appliance if the power cord or power plug is damaged, if it is not working correctly, if it is damaged or if it has been dropped on the floor.



Attention:

This appliance is not designed to be controlled using a programmed device, external timer switch or remote control.

- This appliance is designed for household use only!
- Do not wash it in an automatic dishwasher!

TECHNICAL SPECIFICATIONS

Rated voltage.....	220-230 V
Rated frequency.....	50 Hz
Rated power input.....	250 W
Electrical shock protection class.....	II
Noise level	20 dB(A)

The declared noise emission level of the appliance is 20 dB(A), which represents a level A of acoustic power with respect to a reference acoustic power of 1 pW.

Explanation of technical terminology

Safety class for electrical shock protection:

Class II – Electrical shock protection is provided by double or heavy-duty insulation.

Due to continuous improvement of the appliance, the manufacturer reserves the right to make changes to the text, design and technical specifications without prior notice.

INSTRUCTIONS AND INFORMATION REGARDING THE DISPOSAL OF USED PACKAGING MATERIALS

Dispose of used packaging material at a site designated for waste in your municipality.

DISPOSAL OF USED ELECTRICAL AND ELECTRONIC EQUIPMENT



This symbol on products or original documents means that used electric or electronic products must not be added to ordinary municipal waste. For proper disposal, renewal and recycling, hand over these appliances to determined collection points. Alternatively, in some European Union states or other European countries you may return your appliances to the local retailer when buying an equivalent new appliance. Correct disposal of this product helps save

valuable natural resources and prevents potential negative effects on the environment and human health, which could result from improper waste disposal. Ask your local authorities or collection facility for more details. In accordance with national regulations penalties may be imposed for the incorrect disposal of this type of waste.

For business entities in European Union states

If you want to dispose of electric or electronic equipment, ask your retailer or supplier for the necessary information.

Disposal in other countries outside the European Union.

This symbol is valid in the European Union. If you wish to dispose of this product, request the necessary information about the correct disposal method from the local council or from your retailer.



This product meets all the basic requirements of EU directives related to it.

