

# SENCOR®

SHM 5400WH / SHM 5401GR / SHM 5402BL  
SHM 5403OR / SHM 5404RD / SHM 5405VT  
SHM 5406YL / SHM 5407TQ / SHM 5408RS



## HAND MIXER

Translation of the original manual



# SENCOR®

SHM 5400WH / SHM 5401GR / SHM 5402BL  
SHM 5403OR / SHM 5404RD / SHM 5405VT  
SHM 5406YL / SHM 5407TQ / SHM 5408RS



**A**

**1**


**2**

**3**

**4**

**5**

**6**

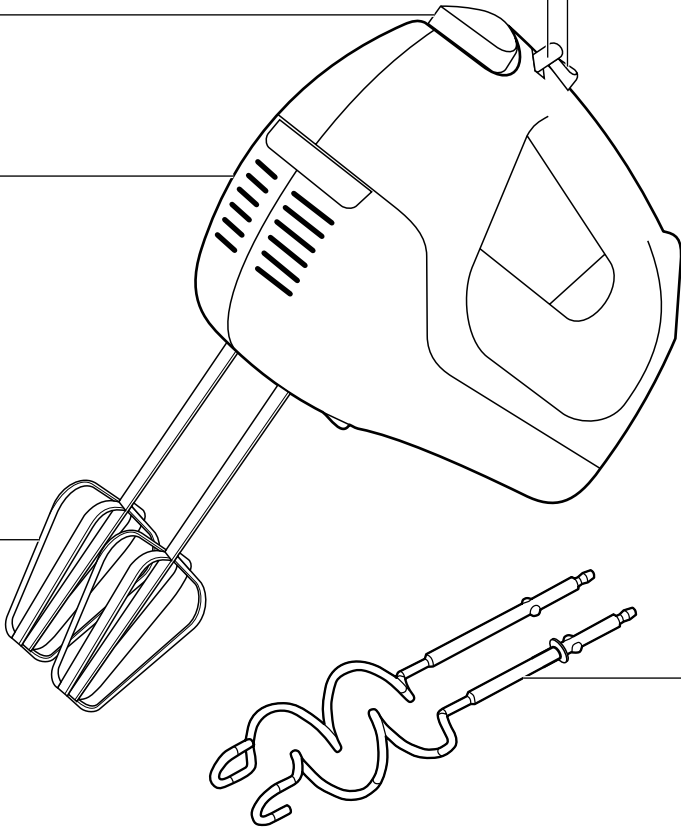

# EN Hand mixer

## Important safety instructions

### READ CAREFULLY AND STORE FOR FUTURE USE.

#### General warnings

- This appliance may not be used by children. Keep the appliance and its power cord away from children.
- The appliance may be used by persons with reduced physical, sensory or mental capabilities or with a lack of experience and knowledge, if they are supervised or have been instructed to use the appliance in a safe manner and understand the potential dangers.
- Children must not play with the appliance.
- Cleaning and maintenance performed by the user must not be performed by unsupervised children.
- In the event that the power cord is damaged, have it repaired at a professional service centre to prevent causing a dangerous situation. It is forbidden to use the appliance if it has a damaged power cord.



#### **Warning:**

Incorrect use may lead to injuries.

- Be careful when handling and cleaning the attachments.
- The surfaces of the appliance that come into contact with food must always be cleaned according to the instructions in this user's manual.

- Always turn off the appliance and disconnect it from the power socket if you will not be using it and if you will be leaving it without supervision, before assembly, disassembly, cleaning or moving it.
- Before replacing the accessories or accessible parts that move during use, turn the appliance off and disconnect it from the power supply.

#### Electrical safety

- Before connecting this appliance to a power socket, make sure that the voltage stated on its rating label corresponds to the voltage in your power socket.
- Connect the appliance only to a properly grounded socket. Do not use an extension cord.
- Do not connect and disconnect the power cord to and from the power socket with wet hands.
- Ensure that the power plug contacts do not come into contact with water or moisture.
- Do not disconnect the appliance from the power socket by pulling on the power cord. This could damage the power cord or the power socket. Disconnect the cord from the power socket by gently pulling the plug of the power cord.
- Do not place heavy items on the power cord. Make sure the power cord does not hang over the edge of a table and that it is not touching a hot surface or sharp objects.
- To avoid the danger of injury by electrical shock, do not repair the appliance yourself or make any adjustments to it. Have all repairs or adjustments of the appliance performed at an authorised service centre. Tampering with the appliance during the warranty period may void the warranty.
- To prevent the risk of injury by electrical shock, never submerge the hand mixer, the power cord or the power plug in water or any other liquid.
- Always turn off the appliance and disconnect it from the power socket when you have finished using it.
- This appliance is not designed to be controlled using a programmed device, external timer switch or remote control.

#### Correct use of the appliance

- Do not use the appliance for a purpose other than that for which it is designed.
- This appliance is designed for use in indoor areas only. Never use it in an outdoor or industrial environment.
- This appliance must be used only in accordance with the instructions contained in this user's manual.
- Only use the appliance with the original accessories that came with it.



#### Attention:

Using non-original accessories may result in a dangerous situation arising.

- Always turn off and disconnect the appliance from the mains power socket when not using it, before cleaning, maintenance or moving it. Never move the appliance during operation.
- Do not use the appliance when it is not functioning correctly or after it has fallen on the floor, been submerged in water or is damaged in any other way. Hand it over to an authorised service centre for inspection or repair.
- It is forbidden to modify the surface of the appliance in any way, e.g. using self-adhesive wallpaper, foil, etc.
- Before first use, it is necessary to thoroughly wash the removable attachments using warm water and kitchen detergent, then rinse them with drinking water and wipe thoroughly until dry using a fine wiping cloth.
- Before turning on the appliance, always make sure that the removable attachments are properly attached to the motor unit. Never combine various types of attachments.
- Do not use the appliance if you have wet hands.
- Do not cover the appliance's vents.
- Do not turn on the appliance when it is empty. Incorrect use of the appliance may negatively affect its lifetime.
- Only start the appliance after submerging the accessories into the container with the ingredients. To prevent food from splashing out, keep the attachments submerged in the container while the appliance is running.
- Avoid coming into contact with the rotating parts of the appliance. Do not place hands, forks or any other utensils into the bowl with the ingredients, and keep hair, clothing, etc. at a sufficient distance from the rotating parts of the appliance during use. If a fork or another utensil falls into the container while the appliance is running, immediately turn it off.
- Be especially careful when handling hot liquids and foods. Hot steam or splashing hot foods and liquids may cause scalding. For reasons of increased safety, it is recommended to allow hot liquids and foods to cool down before blending them. Never blend hot foods and liquids directly in a pot located on a turned on hotplate.
- If you have just processed hot foods, the removable attachments may be hot after they are used.

**Safety during maintenance**

- Allow the appliance to always fully cool down before cleaning it.
- Regularly clean the appliance after each use according to the instructions in chapter Maintenance and cleaning. Do not perform any maintenance on the appliance apart from the maintenance procedure described in chapter Maintenance and cleaning.
- Do not wash the motor unit under running water or submerge it in water or another liquid. The motor unit is not designed to be washed in a dishwasher.
- The removable attachments are intended for short term contact with food (including beverages), i.e. max. 4 hours. To prevent damaging their surface, do not leave them submerged, for example in water for extended periods of time.

# EN Hand mixer

## User's manual

- Prior to using this appliance, please read the user's manual thoroughly, even in cases, when one has already familiarised themselves with previous use of similar types of appliances. Only use the appliance in the manner described in this user's manual. Keep this user's manual in a safe place where it can be easily retrieved for future use.
- We recommend saving the original cardboard box, packaging material, purchase receipt and responsibility statement of the vendor or warranty card for at least the duration of the legal liability for unsatisfactory performance or quality. In the event of transportation, we recommend that you pack the appliance in the original box from the manufacturer.

switch **A2** is set to position 0 (turned off). Otherwise it is blocked against pressing.

### Beaters

- These are used to prepare batter dough, mashed potatoes, whipped cream, whipped egg whites and creams

### Kneading hooks

- These are used for kneading yeast dough and pasta dough, for mixing minced meat, or puff dough.

### DESCRIPTION OF THE APPLIANCE

- A1** Pulse switch for setting maximum speed      **A4** Motor unit  
**A2** Power off and speed setting switch      **A5** Set of beaters  
**A3** Button for releasing removable accessories      **A6** Set of kneading hooks

### OPERATING THE APPLIANCE

1. Check that switch **A2** is set to position 0 (off) and that the power cord is disconnected from the power socket.
2. Select the attachment types suitable for the intended task and insert them into the holes on the underside of the motor unit **A4** according to the following instructions:
  - The mounting parts of the beater attachments are identical and can thus be mounted in either of the holes on the underside of the motor unit.
  - The mounting parts of the kneading attachments differ. The attachment with the ring can only be mounted in the larger hole on the underside of the motor unit, the attachment without the ring can only be inserted into the smaller hole. Be careful not to interchange the attachments or attempt to insert them into the incorrect holes.
3. Push the selected attachments in until they safely click into position.



#### Attention:

Always only install two attachments of the same function into the hand mixer – always either two beater attachments or two kneading attachments. Never insert two different types of attachments, otherwise the hand mixer will be damaged.

4. Place the ingredients into a bowl that is sufficiently large and deep to prevent food from splashing out. Connect the power cord to a power socket. Submerge the beaters **A5** or kneading hooks **A6** into the bowl with the ingredients and start the appliance by setting the switch **A2** to the desired speed. In order to mix the ingredients, initially set a low speed. Then adjust as necessary. To immediately increase the speed to maximum, use the pulse switch **A1**.



#### Attention:

The maximum continuous operating time of the appliance is 5 minutes. Before turning it on again, allow it to cool down for several minutes.

5. After you have finished using the appliance, set the switch **A2** to position 0 (turned off) and disconnect the power cord from the power socket. Make sure that the rotating parts have stopped and then press the button **A3** and remove the used accessories from underneath the motor unit **A4**. Button **A3** can only be pressed when

### SPEED SELECTION

<b>0</b>	Off
<b>Level 1</b>	suitable as the initial speed for mixing a larger amount of food or dry ingredients such as flour, butter and potatoes
<b>Level 2</b>	suitable for processing liquid ingredients, for mixing salad dressings
<b>Level 3</b>	suitable for mixing ingredients when preparing cakes, biscuits and bread
<b>Level 4</b>	suitable for whipping up butter or sugar when preparing sweets, desserts, etc.
<b>Level 5</b>	suitable for whipping eggs, sauces, creams, etc.

### AMOUNT OF INGREDIENTS AND PROCESSING TIME

#### Beaters

Type of ingredients or meals	Amount	Processing time	Recommended speed setting
Creams	approx. 600 g	approx. 3.5 minutes	level 4
Mayonnaise	max. 3 egg yolks	approx. 2 minutes	level 5
Mashed potatoes	max. 750 g	max. 3.5 minutes	level 3
Whipped cream	max. 500 g	max. 5 minutes	level 5
Egg whites	max. 5 egg whites	approx. 3.5 minutes	level 5
Batter	approx. 650 g	approx. 3.5 minutes	level 3

#### Kneading hooks

Type of ingredients or meals	Amount	Processing time	Recommended speed setting
Yeast dough	max. 500 g of flour	max. 5 minutes	level 5

## CLEANING AND MAINTENANCE

- Before disassembly and cleaning it, always make sure that the appliance is turned off, disconnected from the power socket and that the rotating parts are not in move.
- After every use, clean the removed accessories (beaters **A5** or kneading hooks **A6**) using hot water with kitchen detergent. Then rinse them with drinking water and dry thoroughly with a fine wiping cloth. The accessories are intended for short term contact with food (including beverages), i.e. max. 4 hours.
- To clean the motor unit **A4** use a cloth dipped in a weak detergent solution. Then dry everything thoroughly. Never submerge the motor unit **A4** in water or in any other liquid.

## TECHNICAL SPECIFICATIONS

Rated voltage.....	220-240 V
Rated frequency.....	50-60 Hz
Rated power input.....	200 W
Electrical shock protection class.....	II
Noise level.....	83 dB(A)

The declared noise emission level of the appliance is 83 dB(A), which represents a level A of acoustic power with respect to a reference acoustic power of 1 pW.

### Explanation of technical terminology

Safety class for electrical shock protection:

Class II – electrical shock protection is provided by double or heavy-duty insulation.

Changes to text and technical parameters are reserved.

## INSTRUCTIONS AND INFORMATION REGARDING THE DISPOSAL OF USED PACKAGING MATERIALS

Dispose of used packaging material at a site designated for waste in your municipality.

## DISPOSAL OF USED ELECTRICAL AND ELECTRONIC EQUIPMENT



This symbol on products or original documents means that used electric or electronic products must not be added to ordinary municipal waste. For proper disposal, renewal and recycling hand over these appliances to determined collection points. Alternatively, in some European Union states or other European countries you may return your appliances to the local retailer when buying an equivalent new appliance.

Correct disposal of this product helps save valuable natural resources and prevents potential negative effects on the environment and human health, which could result from improper waste disposal. Ask your local authorities or collection facility for more details.

In accordance with national regulations penalties may be imposed for the incorrect disposal of this type of waste.

### For business entities in European Union states

If you want to dispose of electric or electronic appliances, ask your retailer or supplier for the necessary information.

### Disposal in other countries outside the European Union.

This symbol is valid in the European Union. If you wish to dispose of this product, request the necessary information about the correct disposal method from the local council or from your retailer.



This product meets all the basic requirements of EU directives related to it.



