

1

3SEC

1X

3SEC

2

* not included

The diagram illustrates the back of the device, showing a Micro SD card slot and a control panel. A Micro SD card is shown being inserted into the slot. The control panel includes buttons for play/pause, previous, next, and power.




[USER GUIDE]
WIRELESS SPEAKER

USER GUIDE


WIRELESS SPEAKER

1. CHARGE SPEAKER

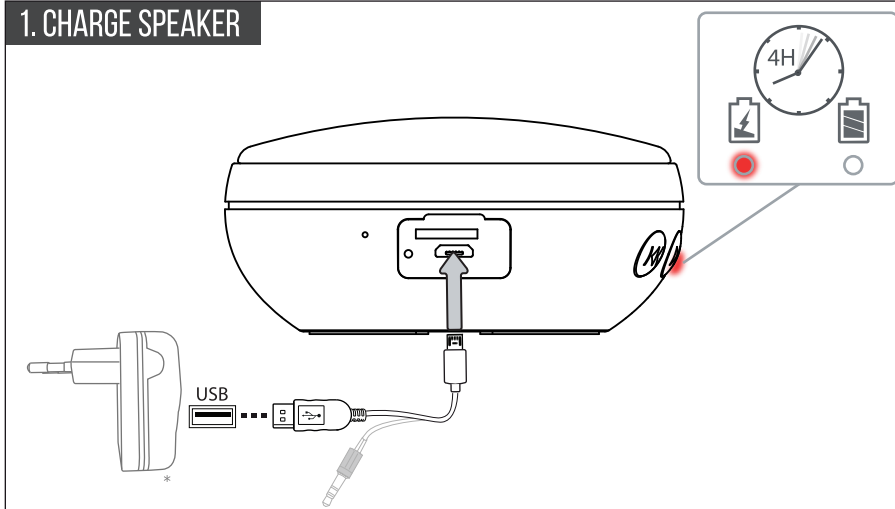


* not included

2. WIRELESS SETUP 1/2

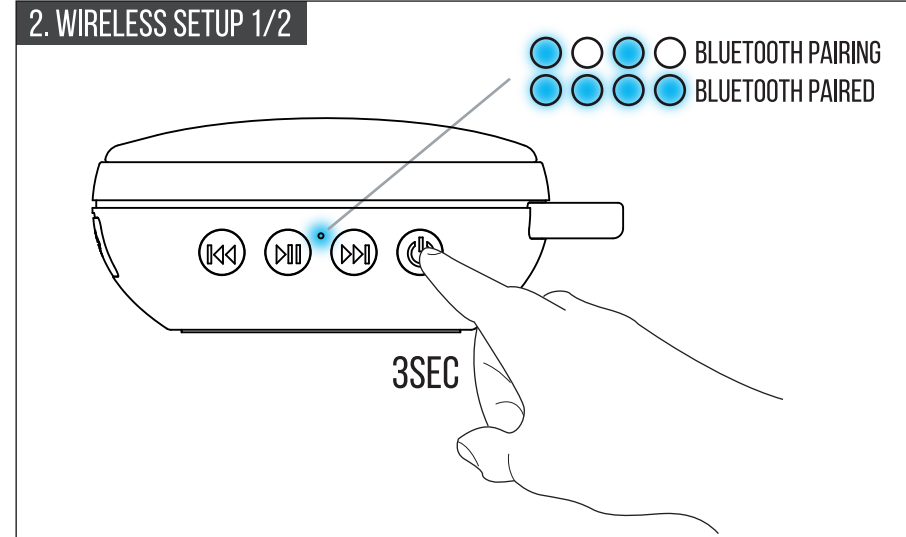

3. WIRELESS SETUP 2/2

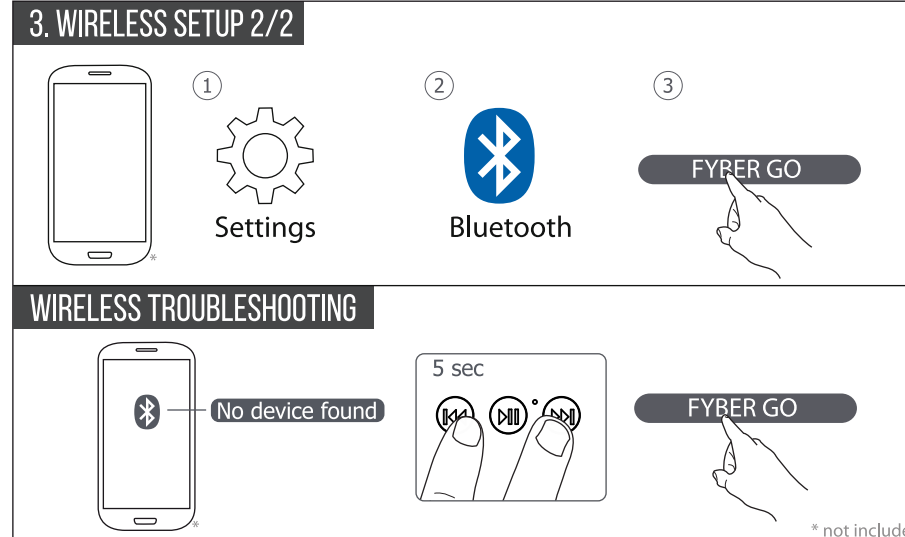

4. PLAY MUSIC WIRELESS

